
WOOD PLANK

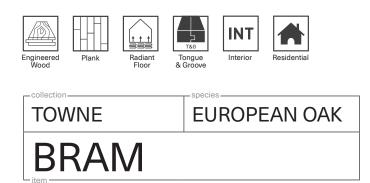

THICKNESS		\$ WIDTH		SURFACE FINISH	
9/16"		9" 1/2		MATT URETHANE	
TEXTURE	TENON		BEVELED		کے WEAR LAYER
BRUSHED	T&G		MICRO BEVEL		ЗММ

INSTALLATION & MAINTENANCE

Dry cleaning is the best way to clean wood floors, rather than wet cleaning. Vacuum regularly and occasionally use a damp, well wrung-out cloth mop with BONA Floor cleaner. Floor should dry within one minute if used proper amount of cleaner.

■ See the installation manual for more details.

ACCLIMATION

The wood floor needs to be acclimated on site for 7 – 14 days depending upon the moisture content of the planks, subfloor and the environment it will be performing in. See the installation manual for more details.

ciotlegno.com



2301 Defoor Hills RD NW, Atlanta, GA 30318 404-941-7420

LEGNO



INSTALLATION

WARRANTY RESIDENTIAL

